



CALIBER NO. 6P00 BATTERY: SR621SW

FEATURES : ANALOG MULTI-HAND QUARTZ WATCH WITH DAY, DATE, MOON PHASE AND MONTH

INSTRUCTION MANUAL

- A) DISPLAY AND BUTTON
- B) OPERATION PROCEDURE
- C) SETTING THE DAY AND TIME (HOUR, MINUTE)
- D) SETTING AND READING THE AGE OF THE MOON
- E) SETTING THE MONTH (BY QUICK OPERATION)
- F) SETTING THE DATE (BY QUICK OPERATION)

1

A) DISPLAY AND BUTTON



NORMAL CROWN POSITION
1ST POSITION QUICK OPERATION - DATE (COUNTERCLOCKWISE), MOONPHASE(CLOCKWISE)
2ND POSITION TIME/DAY SETTING (CLOCKWISE)

2

B) OPERATION PROCEDURE

1. SETTING THE DAY
 SETTING THE TIME (HOUR, MINUTE)
2. SETTING THE MOON PHASE
3. SETTING THE MONTH
4. SETTING THE DATE

C) SETTING THE DAY AND TIME (HOUR, MINUTE)

The hour, minute and day are set by the same operation.

SETTING PROCEDURE



3

C-1) SETTING THE DAY

Pull the crown out to the 2nd position.
 Turn the hour/minute hands in a clockwise direction to set a day.
 In order to set the day, you must advance the hour hand by 24 hours per day.

Note:
 * If the day is set by turning the crown counterclockwise, there is the possibility the date will not change over. Do not set the day by turning the crown in counterclockwise direction.

* The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

C-2) SETTING THE TIME

After setting the day, set the hour (and 24hour) and minute hands.
 Turn the hour/minute hands in a clockwise direction to

4

set the time.

To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.

After setting the time, use a time signal to synchronize the watch by pushing crown to the normal position.

Note:
 Make sure you have correctly set AM/PM before setting the time.

When the day changes over, it is a.m.. (Day changes over between 0:00a.m. and 5:30a.m. or little later)

5

D) SETTING AND READING THE AGE OF THE MOON

* The moon phase represents the age of the moon, the actual shape of the moon during each phase is not represented.

* Use the moon phase only as a guide to the age and phase of the moon when reading and setting watch.

D-1) SETTING THE AGE OF THE MOON

Pull the crown out to the 1st position.
 Turn the crown clockwise to advance the moon phase.

D-2) SETTING THE AGE OF THE MOON WITH AGE SCALE

* Check on the age of the moon for the day. Check the newspaper or other source for the age or phase of the moon for today or tomorrow. Subtract one day before a

6

setting is made if the listings for tomorrow are used.

* Setting procedure(Example: age of the moon:4.4)

Pull the crown out to the 1st position.

Turn the moon disc clockwise

until the center of the moon is in line with 4.4 on the scale.



D-3) SETTING THE AGE OF THE MOON WITHOUT THE AGE SCALE

* Check the newspaper or other source that lists current age or phase of the moon. Referring to section D) Reading the age of the moon, set the moon phase to the age (0,7,15 or 22) closest to the listed.

More accurate setting can be made at the same time of the new moon (0) or full moon(15).

THE AGE OF THE MOON

The age of the moon is indicated in units of days. The

7

average period from a new moon to the next new moon is equivalent to about 29.5 days.

D-4) READING THE AGE OF THE MOON

New moon	First quarter moon	Full moon	Last quarter moon
Moon's age : 0	Moon's age : 7	Moon's age : 15	Moon's age : 22
Spring tide	Neap tide	Spring tide	Neap tide

* From the phase of the moon in the display, you can tell the size of the tide.

* If you want to set more accurately the phases of the moon, we recommend to set it at the time of a New Moon (The Moon is hidden in the display..New Moon) or a Full Moon (The Moon appears fully in the display..Full Moon).

8

The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st. (On the 31st, the position of the month between the current and next month.)

F) SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the 1st position. Turn the crown counterclockwise to set the date quickly.

Note:
 Do not set the date between the hours 9:00p.m. and 0:30a.m.. The date may not change correctly the next day.

E) SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time.

Be sure to press firmly on the button when making month changes.

Note:

* Do not set the month when the date hand is between the 26th and 31st. Move the date hand out of this period. After this operation, return the date hand to the proper setting. (When the date hand is between the 26th and 31st, month quick setting can not be made or if a quick setting is attempted, the month may not advance to the next month as normal.)

* The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month.

9

WEB SITE :

karlleimonwatches.com